



# 昭和レコードスピーカー

TAKARA  
TOMY  
ARTS

\*写真やイラストは、実際の商品とは多少異なる場合があります。  
\*単4形アルカリ乾電池4本使用（電池は別売りです。）  
REQUIRES 4 LR03("AAA" SIZE) BATTERIES(NOT INCLUDED)

## Instruction Manual

Aged 15 and above

この度は、タカラトミーアーツ「昭和レコードスピーカー」をお買い上げいただきまして、誠にありがとうございます。  
ご使用の前に、この取扱説明書をよくお読みください。また、読み終わった後は必ず保管しておいてください。

### ⚠ 警 告 (けいこく)

必ずお読みください。

●小部品があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。●航空機、病院など精密機械のあるところ、混雑した場所、自動車内等では使用しないでください。電波が電子機器や医療用電子機器、心臓ペースメーカーなどに影響を及ぼし、誤動作による事故の危険があります。●心臓ペースメーカーを装着されている場合は、装着部から22cm以上離して使用してください。

### ⚠ 注 意 (ちゅうい)

●本商品は15才未満のお子様には適用しません。15才未満のお子様の場合は、保護者のもとでお使いください。●本商品は単4形アルカリ乾電池（4本）を使用します。（別売り）●乾電池は飲み込むと危険です。お子様の手の届かない所に保管してください。また万一飲み込んだ場合にはすぐに医師に相談してください。《電池を誤使用すると発熱・破裂・液漏れの恐れがあります。下記に注意してください。》・二次電池（充電式電池）は、絶対に使用しないでください。・古い電池と新しい電池、いろいろな種類の電池をまぜて使わないでください。・+（プラスマイナス）を正しくセットしてください。・ご使用後は必ずスイッチを切り電池をはずしてください。はずした電池は、小さいお子様の手の届かないところに保管してください。・ショートさせたり充電、分解、加熱、火の中に入れたりしないでください。・万一、電池からもれた液が目に入ったときはすぐに大量の水で洗い、医師に相談してください。皮膚や衣服に付いたときは水で洗ってください。・廃棄するときは、自治体の廃棄物処理の指示に従ってください。●レコード回転部に指や髪の毛や衣類などをささないように注意してください。●思わぬ事故の恐れがありますので、ご使用後は3才未満のお子様の手の届かないところに保管してください。●安全のため、破損、変形したものを使わないでください。

〈使用上の注意〉○ご使用の前に、取扱説明書（本書）をよくお読みください。また、読み終わった後は必ず保管しておいてください。○ビニール袋は梱包材ですので開封後はすぐに捨ててください。○直射日光の当たる所、暖房器具の近くなど温度の高すぎる所、低すぎる所には置かないでください。○ぶつけたり、落としたりしないでください。○本商品は防水のため、絶対にめらさないでください。

〈お願い〉○本商品は国内専用品です。海外では使用しないでください。○本商品のご使用により、スマートフォン等その他機器やソフトウェア上に生じた損害に対し、当社は一切の責任を負いませんので予めご了承ください。

〈通信について〉○本商品は、電波法に基づく2.4GHz帯高度化小電力データ通信システムの無線設備として、特定無線設備認証を受けています。従って、本商品を使用するときに無線局の免許は必要ありません。○この周波数の電波はいろいろな機器（電子レンジ、無線LAN機器など）が使用しておりますので、電波の干渉により、他の機器の動作や性能に影響を及ぼすことがあります。予めご了承ください。○特定無線設備の技術基準適合マーク（技適マーク）は、本商品に表示されています。

#### <材質表示>

- 本体、スイッチ、シングルレコード盤、蓋：ABS
- ターンテーブル、アーム、回転数切り替えスイッチ、アダプター：PP
- ソノシート：MABS ●タイトルシール、本体シール：紙

©T-ARTS  
MADE IN CHINA

連続使用時間：約7時間（アルカリ乾電池使用／本体音量MAX／45回転）

※使用状況により異なります。

タカラトミーアーツでは「子どもたちに安全で楽しいおもちゃと夢」を第一に考えております。そのため、常に製品に對し研究、改良を行っております。お買い上げ時期によつて同一製品の中にも多少異なるものや、パッケージの字彙やイラストなど異なる場合がございますがご了承ください。製品につきましては、万全の注意をはらって製造に当たっておりますが、万一お気付かの点がございましたら下記までご連絡ください。

タカラトミーアーツ サポート【検索】  
[www.takaratomy-arts.co.jp/support.html](http://www.takaratomy-arts.co.jp/support.html)

発売元：株式会社 タカラトミーアーツ  
〒124-8511 東京都葛飾区立石7-9-10  
●たのしいタカラトミーアーツの情報はインターネットで  
[www.takaratomy-arts.co.jp](http://www.takaratomy-arts.co.jp)

## Contents



Speaker X 1

Instruction Manual X 1




Single Disk X 1 Solo Disk X 1



## Name of Parts


- ① Power/Volume Dial
- ② Pairing Button
- ③ Arm
- ④ Turntable
- ⑤ Adapter
- ⑥ rpm Switch
- ⑦ Single Disk
- ⑧ Solo Disk
- ⑨ Cover Lid  
(Please remove the lid before using)

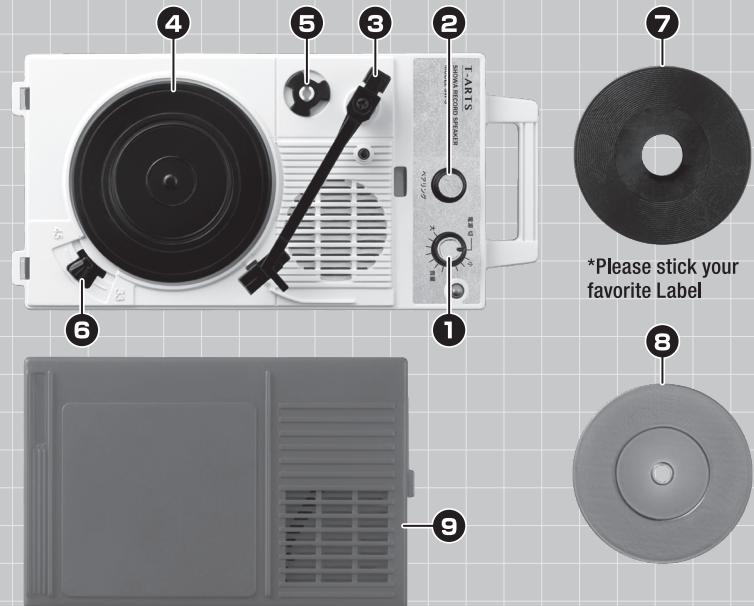


\*Please stick your favorite Label

## How to insert the battery

- 1 Open the Battery cover on the back side  
Loosen the screws with screwdriver along the arrow mark

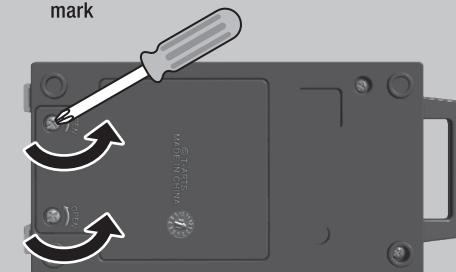

- 2 Insert the battery with correct pole direction (+ -), Close the Battery cover lid and tighten the screws

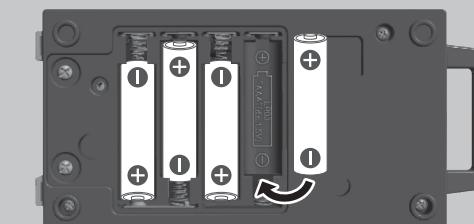

Bluetooth®


Bluetooth ver. 4.2

Codec: SBC

Profile: A2DP, AVRCP, HFP, AVCTP, AVDTP


The BLUETOOTH word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

## Attention Please do not lose the Adapter

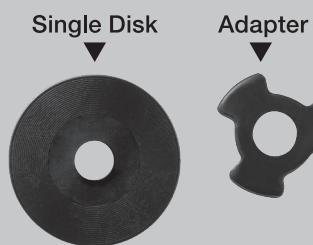

Single Disk

Adapter

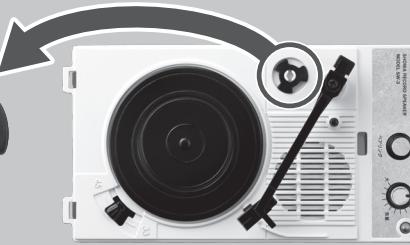


During placing the Single Disk, the Adapter is needed  
If you don't need to use the Adapter, please keep it on the Speaker

## How to Use

### Unique function when using Designated App

Able to play the music as like as playing in phonograph by using Designated App  
Even Designated App is not being used, the Speaker can be acted as normal **Bluetooth** Speaker

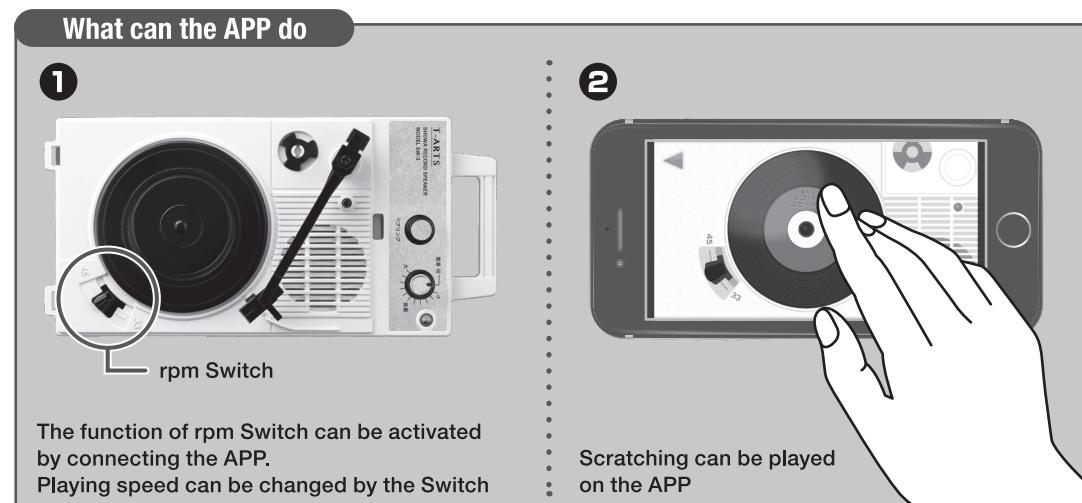

Please Download the Designated App on App Store/Google Play



Retro Record Speaker

\*Download the App may cost Communication Charge

Download on the  
App Store

GET IT ON  
Google Play

\*Apple, the Apple logo, are trademarks of Apple Inc.  
Registered in the U.S. and other countries. App Store is a service mark of Apple Inc.  
\*Google Play, the "Google Play logo", "Android" are registered trademarks of Google Inc.


### Connect the device via Bluetooth

1 Switch on the Device by twisting the Power / Volume Dial through clockwise direction. Once Power is being switched on, the LED lamp will become blinking



2 Make sure that the device which is able to connect via Bluetooth. Press the pairing button for more than 1 second to make the speaker change to pairing mode

\*About the operating method of the devices, please confirm with the manufacturer

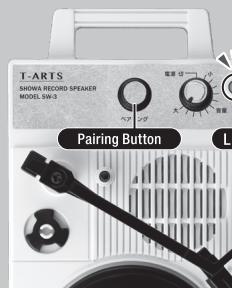


3 Once the **Bluetooth** getting connected, the LED lamp will become Lid

\*If the item getting connected to other devices already, it may connect that devices in prior when pushing the Pairing Button



### Play the Music

1 Put your favorite Record on the Turntable

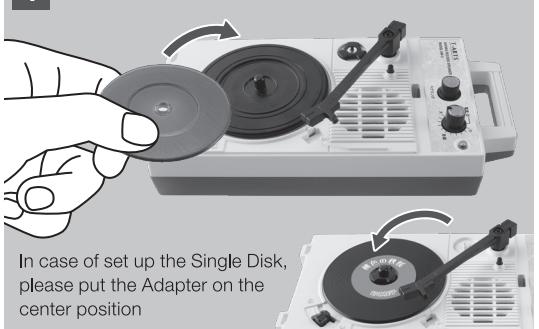

In case of set up the Single Disk, please put the Adapter on the center position

3 Put the Arm part on the disk, then music will be started to play and the Disk will start to rotate. When move out the Arm Part, music will be stopped to play and Disk will also stopped rotating.



Item may unable to work probably if various Apps has been activated together

2 Press the "Play" Button on the Device



4 Switch the rpm Switch and the rotating speed will be changed

It may unable to work probably due to the App

■45 rpm Rotating Speed : Fast

■33 rpm Rotating Speed : Slow




※使用するアプリにより再生する曲が順送りなったり、頭出しされたり、1つ前の曲に戻したりすることがあります。

### More Joy by using Designated App

1 Playing speed can be changed by switching the rpm Switch




5 <How to Change the Volume>  
Twist the Power/Volume Dial to adjust the Volume

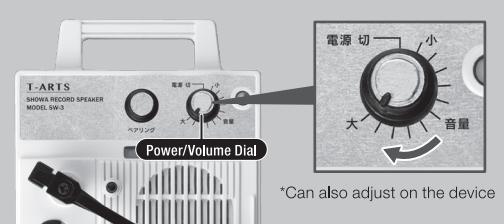


\*Can also adjust on the device

2 Touch the Disk on the App for Scratching.

\*Please do not scratch the Disk placed on the item. Malfunction may be caused.

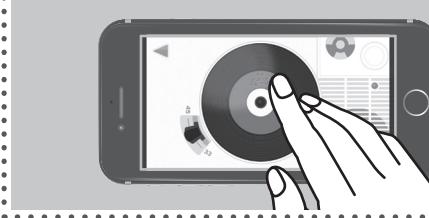

6 After playing, please switch off the Power by twisting the Dial through Anti-Clockwise Direction.

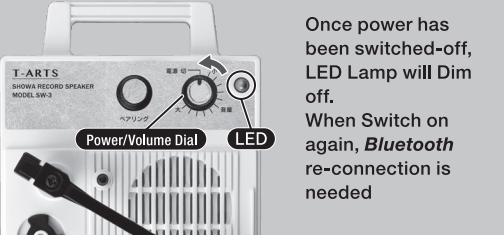

Once power has been switched-off, LED Lamp will Dim off. When Switch on again, **Bluetooth** re-connection is needed